

## 1-6. Theft deterrent system

### Engine immobilizer system

The vehicle's keys have built-in transponder chips that prevent the engine from starting if the key has not been previously registered in the vehicle's on-board computer.

Never leave the keys inside the vehicle when you leave the vehicle.



The indicator light flashes after the “ENGINE START STOP” switch has been turned OFF to indicate that the system is operating.

The indicator light stops flashing after the “ENGINE START STOP” switch has been turned to ACCESSORY or IGNITION ON mode to indicate that the system has been canceled.

---

#### n System maintenance

The vehicle has a maintenance-free type engine immobilizer system.

#### n Conditions affecting operation

Depending on surrounding environment and conditions, the engine immobilizer system may not operate properly. This may prevent the engine from starting.  
(→P. 41)

## n Certifications for the engine immobilizer system

► For vehicles sold in the U.S.A.

FCC ID: NI4TMIMB-1

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### FCC WARNING

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

► For vehicles sold in Canada

### NOTE:

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.



### NOTICE

## n To ensure the system operates correctly

Do not modify or remove the system. If modified or removed, the proper operation of the system cannot be guaranteed.

## 1-6. Theft deterrent system

# Alarm

The system sounds the alarm and flashes the lights when forcible entry is detected.

### **n** Triggering of the alarm

The alarm is triggered in the following situations when the alarm is set:

- 1 A locked door or trunk is unlocked or opened in any way other than using the entry function, wireless remote control or key. (The doors will lock again automatically.)
- 1 The hood is opened.

### **n** Setting the alarm system



Close the doors, trunk and hood, and lock all doors.

The system will be set automatically after 30 seconds.

The indicator light changes from being on to flashing when the system is set.

### **n** Deactivating or stopping the alarm

Do one of the following to deactivate or stop the alarm:

- 1 Unlock the doors or trunk.
- 1 Turn the "ENGINE START STOP" switch to IGNITION ON mode or start the engine. (The alarm will be deactivated or stopped after a few seconds.)

## n System maintenance

The vehicle has a maintenance-free type alarm system.

## n Items to check before locking the vehicle

To prevent unexpected triggering of the alarm and vehicle theft, make sure of the following:

- 1 Nobody is in the vehicle.
- 1 The windows and moon roof are closed before the alarm is set.
- 1 No valuables or other personal items are left in the vehicle.

## n Triggering of the alarm

The alarm may be triggered in the following situations:  
(Stopping the alarm deactivates the alarm system.)



- 1 A person inside the vehicle opens a door, the trunk or hood.




- 1 The battery is recharged or replaced when the vehicle is locked.

## n Alarm-operated door lock

- 1 When the alarm is operating, the doors are locked automatically to prevent intruders.
- 1 Do not leave the key inside the vehicle when the alarm is operating, and make sure the key is not inside the vehicle when recharging or replacing the battery.

### n Panic mode



When  is pressed for longer than about one second, an alarm will sound for about 60 seconds and the vehicle lights flash to deter any person from trying to break into or damage your vehicle.

To stop the alarm, press any button on the wireless remote control.

### NOTICE

#### n To ensure the system operates correctly

Do not modify or remove the system. If modified or removed, the proper operation of the system cannot be guaranteed.